




MS Spark Box Wiring Diagram

The MS3 ECU with an MS3X board can not directly fire a coil, unless it has a built in ignitor. Therefore any coil without an ignitor will need a spark driver box:

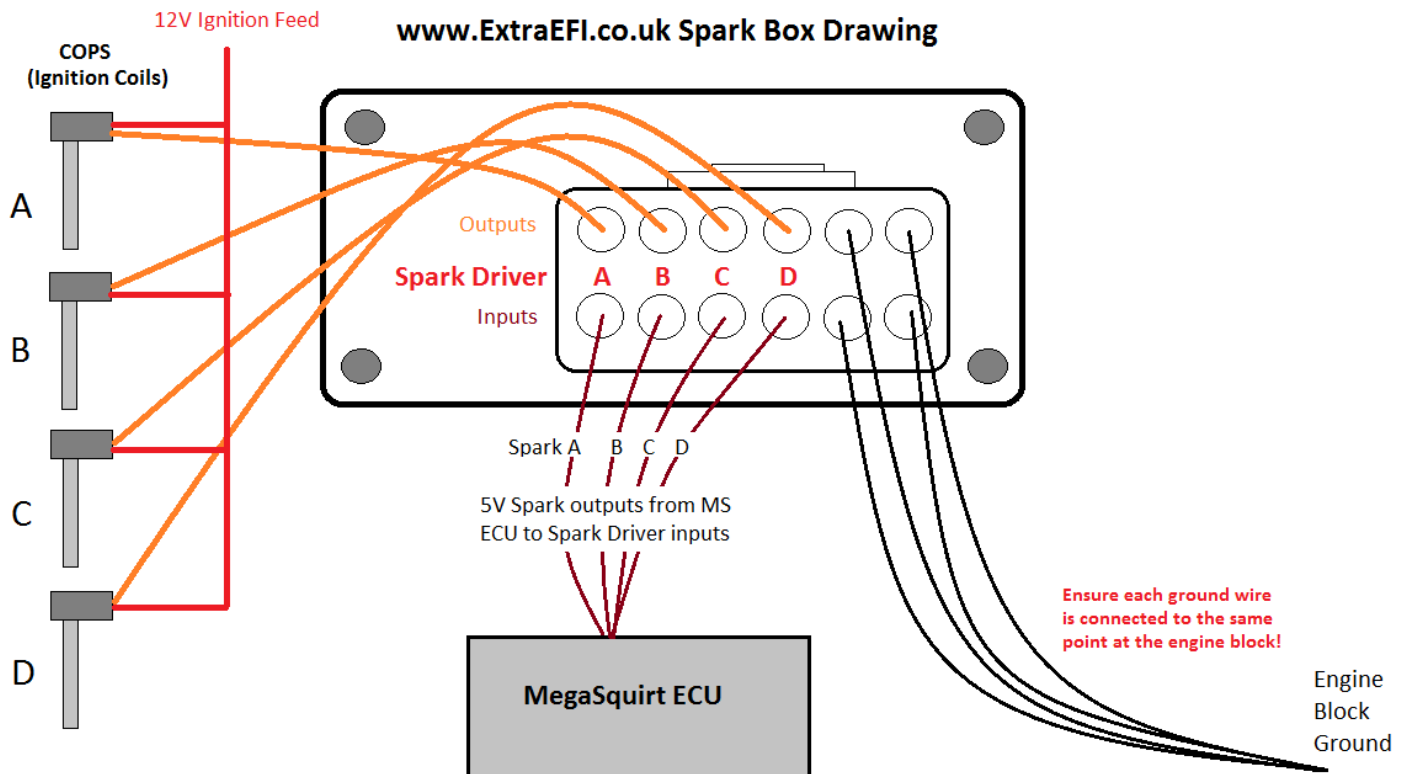

The grounds must ALL run individually back to the engine block and connect to the same point.

Input to drivers are along the bottom row of the plug, outputs at the top.

Input A will fire output A, etc.

www.ExtraEFI.co.uk